

Neuen Alarmplan

Description


In the alarm plans you can configure the actions that will be executed if

- an **alarm event (at the alarm sources)** or
- an **escalation level** occurs.

Alarm plans are connected to an alarm source (measuring device) (cf. "Alarm Sources").


- After you have opened the window (Alarm) "Configuration" (cf. **Window (Alarm) "Configuration"**), click on the button "**Alarm Plans**" to activate the buttons for editing and managing the alarm plans.
- Click on the button "**New Alarm Plan.**"
- The dialog box "**Create New Alarm Plan Configuration**" opens.

Fig.: Window (Alarm) "Configuration" - Alarm Plans "New Alarm Plan"

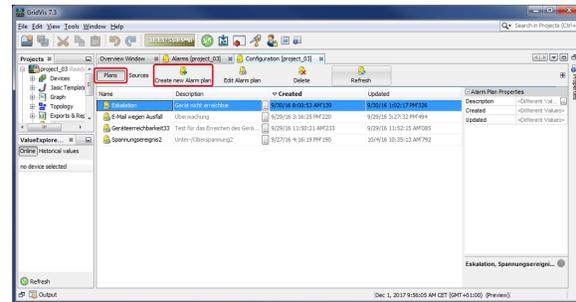

- In the dialog box "**Create New Alarm Plan Configuration**" you can configure your alarm plan.
- For the "**Actions to be Executed**" after the occurrence of the alarm events, there are **4 tabs** for configuration.
- With the button "**New Escalation Reason**" you can create - if you like - further "**Escalation Levels**" (cf. "**Alarm Plan - Escalation Levels**")

Fig.: Dialog box "Create New Alarm Plan Configuration"

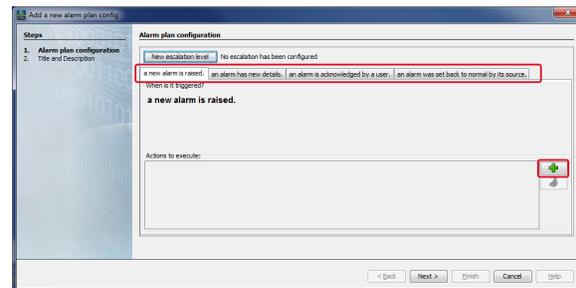


| | Alarm Event | Description |
|----|---|--|
| 1. | "A new alarm was reported" | Start (Tab) - Here you can configure the first " Action to be Executed " that the system performs if an alarm event (at an alarm source) occurs. |
| 2. | "An alarm has new details" | Here you can configure an " Action to be Executed " if the assigned alarm event contains new details. A new detail may be, for example: If you have configured an electric surge as an alarm event and the surge has independently dropped to a normal voltage level, then for the set surge a new detail has resulted. |
| 3. | "An alarm is acknowledged by a user" | Here you can configure an " Action to be Executed ," if the assigned alarm event was acknowledged (confirmed) by a user. |
| 4. | "An alarm was reset to normal by its emitter (perpetrator)" | Here you can configure an " Action to be Executed ," if an alarm event was reset by the emitter (perpetrator). |

- In all tabs for the respective alarm events, you can use the button " " to configure the "**Action to be Executed.**"
- Click on the button " " to open the window "**New Action.**"
- In the window "**New Action**," select your "**Action to be Executed**" for an alarm event in the first step.

Fig.: "New Action" window

- In the options list you can choose between:
 - "Execute a Program" and
 - "Send an Email".

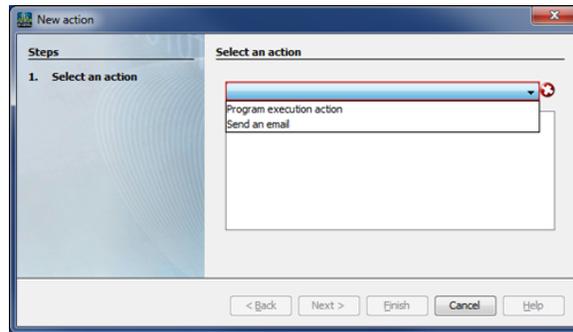

Software: GridVis 7

V 1.0

Related links