

# Function "Set Server"

## Description


Alarm sources are always assigned to an executing server. The connection between alarm source and server can be configured in the Alarm Source Configuration (cf. "New Alarm Source") or in the window (Alarm) "Configuration" via the button "Set Server."

- In the window (Alarm) "Configuration," mark your alarm source with the mouse and click on the button "Set Server."
- The window "Set Executing GridVis" will appear.

Fig.: Window (Alarm) "Configuration" - Alarm sources "Set Server"



- Mark your server that will execute the alarm source in the list.
- Click on the button "Done."
- The column "Executing Server" in the window (Alarm) "Configuration" will show the corresponding server.

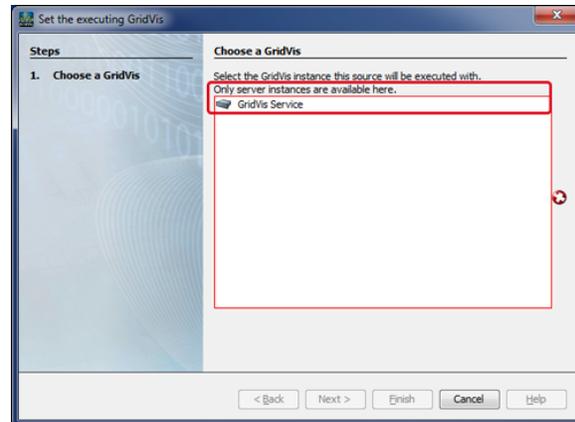



## ATTENTION!

If you want to make changes or alter the name on the GridVis server, go to the server settings for the GridVis service of your GridVis "Standard" or "Expert" edition (at <http://localhost:8080/admin>).

- Log in to your GridVis service with your user name and password.
- The window "System" can be opened under "Navigation Menu" --> "Settings" --> "System" (Tab "Server").
- Standard entry (server name): GridVis Service. The server name is an internal name that represents the name of the service in GridVis.

Fig.: GridVis - Settings "System" - Tab "Server"

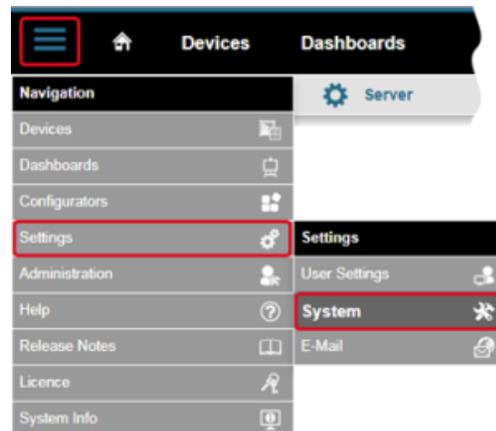

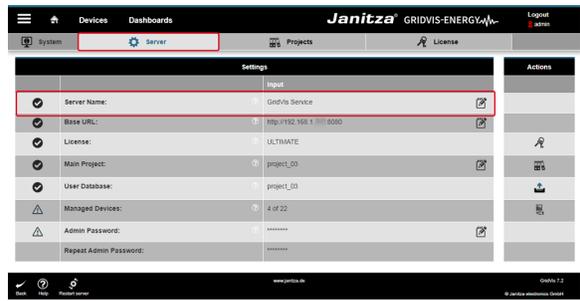

Software: GridVis 7

V 1.0

Related links